


Using Your New TV System

After plugging in your set top box (STB) to the HDMI port on your TV and connecting the power cord, your STB will automatically turn on and display information about connecting to the TV network. If the STB is already plugged in, but displaying a RED light on the front/top corner, just press the red power button on the remote control and the STB will turn on and display information about connecting to the TV network. When the STB is on, the light on the front/top corner will display a WHITE light.

The STB has 2 main screens or menus. The Main Menu and the 3Vu Guide Menu.

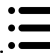 
The Main Menu: To view the main menu, press the HOME icon  on your remote control and you will see a screen with buttons on the bottom for TV and other services available. To select those services, use the left and right arrow buttons on your remote to highlight the one you want. If there are options for that service, you can select them by using the up and down arrow buttons on your remote control to highlight the one you want. Once highlighted, press the OK button on your remote control and you will enter that service.

The 3Vu Guide Menu: To view the 3Vu Guide Menu, just press the OK button any time you are viewing a TV channel. The 3Vu Guide shows a list of channel numbers and names on the left side with the channel you are currently viewing highlighted, the channel you are currently viewing on the upper right side, and the current and next 4 programs of the highlighted channel on the lower right side. To view the programs now playing and coming soon on any channel, use the up and down arrows on your remote to move up and down in the channel number list. As you move from channel to channel you will see the current and upcoming programs change on the lower right side. When you find a channel and program you like press the OK button and the channel will now begin playing in the upper right side. To begin viewing the channel in full screen, press the OK button again.

You can also access the Main Menu and the Week Ahead Guide Menu from this screen. To return to the Main Menu, press the left arrow button. To access the Week Ahead Guide Menu press the right arrow button.


Additional Secondary Menus are The Week Ahead Guide Menu and the Overlay Guide Menu.

The Week Ahead Guide Menu: When viewing the Week Ahead Guide Menu, the selected day and program that is currently playing will be highlighted. To view programs on other days, use the up and down arrows to highlight days of the week. To view programs on each day, use the right arrow to select the right side column. Then use the up and down arrows to view programs. When a program is highlighted, detailed information will be displayed below. You can also schedule a recording (DVR) from this menu by pressing the red button on your remote control and using the right arrow to select YES and then press the OK button.

The Overlay Guide Menu: Another way to view a program guide is available when viewing any channel. Press the “hamburger”  button on your remote control. A menu showing the current channel highlighted with a red line showing the current time is displayed. Use the up and down arrows on your remote to look at programs on different channels and use the left and right arrows on your remote to move backward and forward in time. Through this menu you can use Ketchup TV and watch programs that


aired in the past (up to 24 hours ago). To move backward in time use the left arrow button. As you move backward, programs will highlight. Press the OK button to select a highlighted program to begin playback. Press the “hamburger” button to remove the Overlay Guide Menu from the screen.


Other Buttons:


Recordings (DVR): Play back recorded programs is accessed through the Recordings button in the Main Menu. Access the Main Menu by pressing the Home icon on your remote control. Use the left or right arrows on your remote control to select the Recordings button. Press OK to enter the Recordings screen. On the Recordings screen you will see all your recorded programs listed from the newest (on top) to the oldest (on the bottom). To play back a recorded program use the up and down arrows on your remote control to highlight the program you want to watch. Press the OK button to begin playing the program. Once the program is playing, you can fast forward or rewind by pressing the rewind and fast forward buttons on your remote control  to move backwards and forwards in the program. To delete a recorded program, highlight the program in the Recordings screen and press the RED delete button on your remote control. DVR is not included in all IPTV deployments. This feature may be unavailable.


Volume: While watching a program, press the VOL up button on your remote control to increase the volume and the VOL down button on your remote control to decrease volume.

Channel: While watching a program, press the CHAN up button on your remote control to go UP in channel number and the CHAN down button on your remote control to go DOWN in channel number.

Information: Press the  information icon to find out more information about programs you are watching.

Mute: Press the  mute icon to mute or unmute audio.

Back: Press the  back icon to go back to the previous screen or if you are watching a channel to go back to the previous channel.

Play/Pause: Press the  play/pause icon to pause or play recordings or Ketchup TV.

To turn off your STB, press the RED power button on your remote control.